

FIG. 1

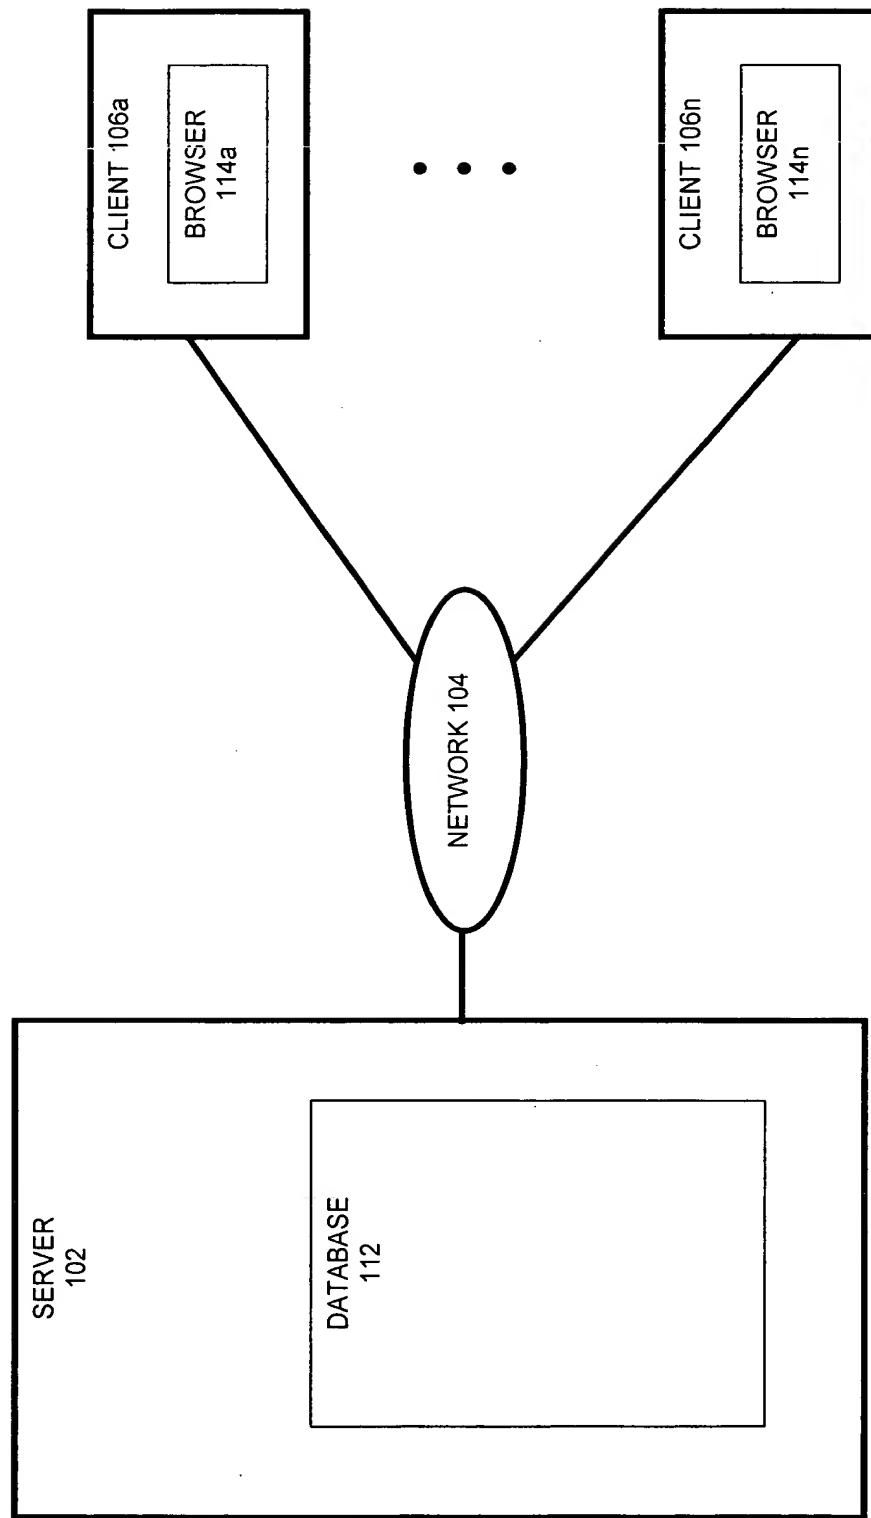


FIG. 2

SERVER
102

MEMORY
200


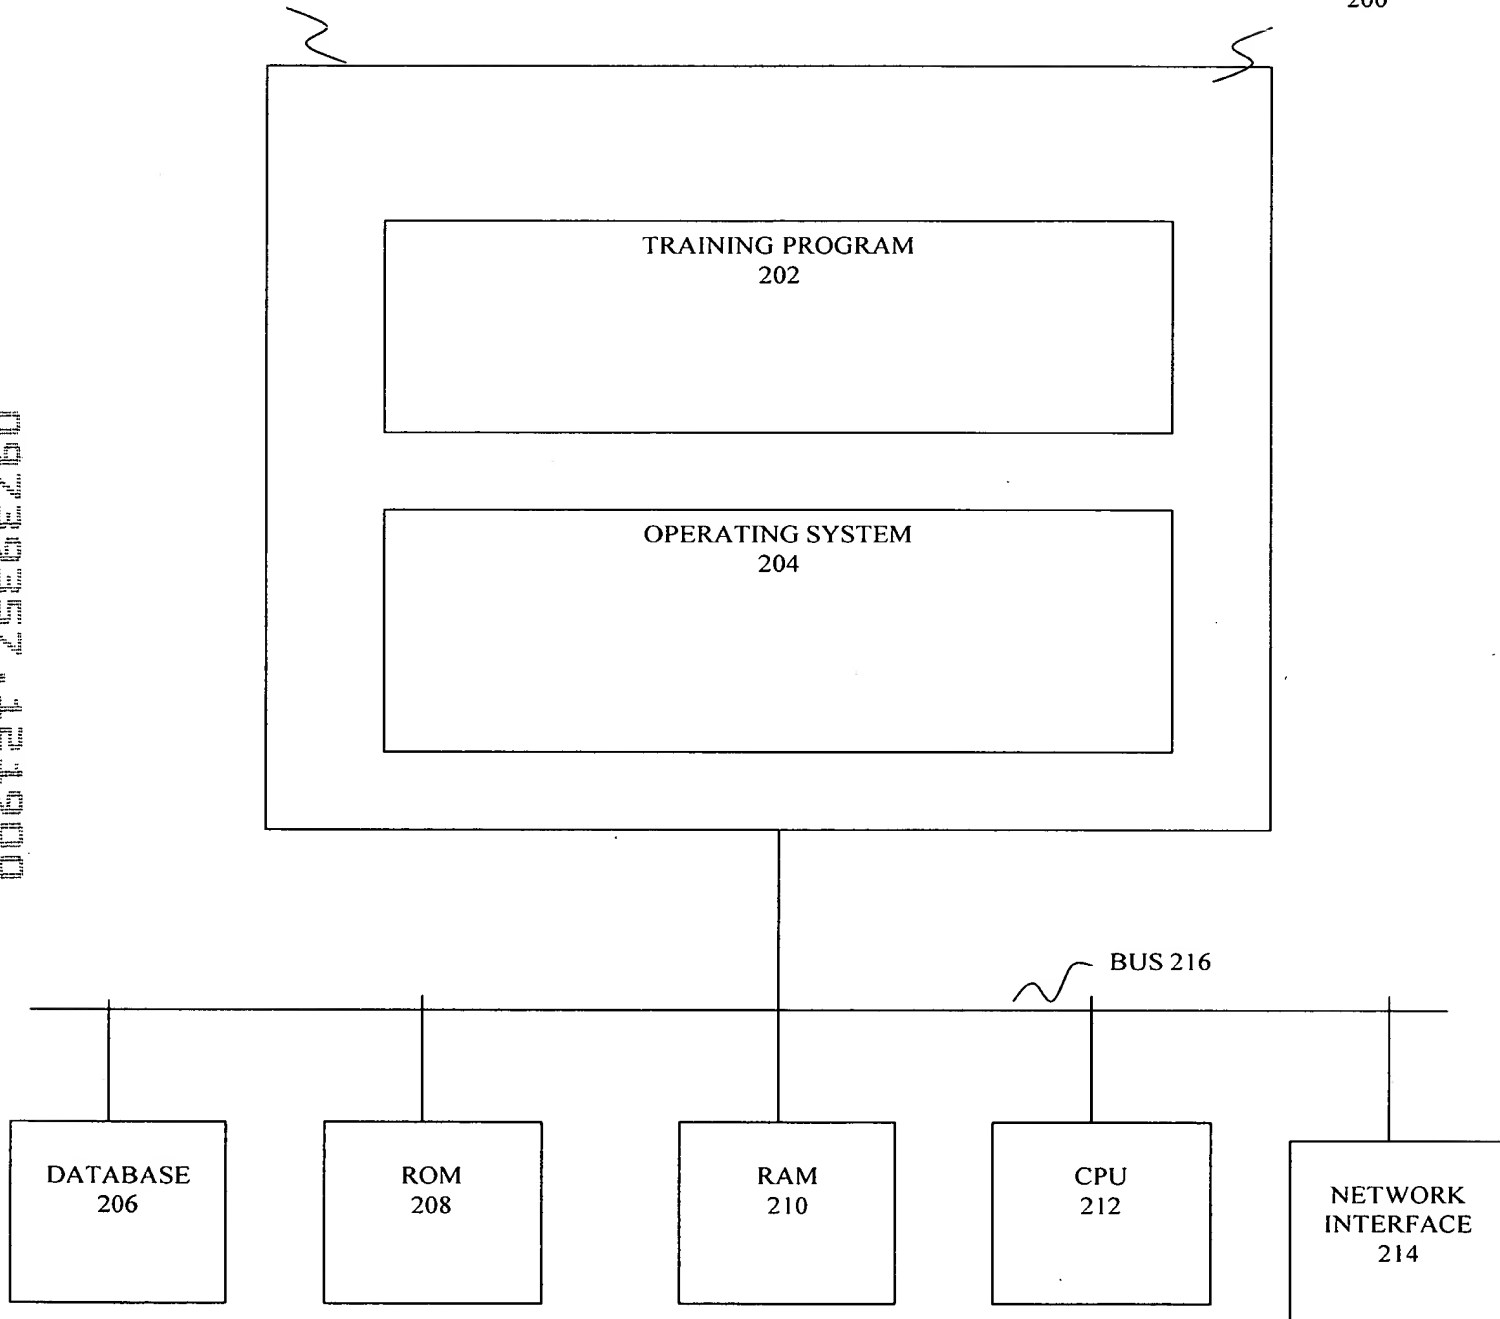


FIG. 3

USER COMPUTER 106

MEMORY 302

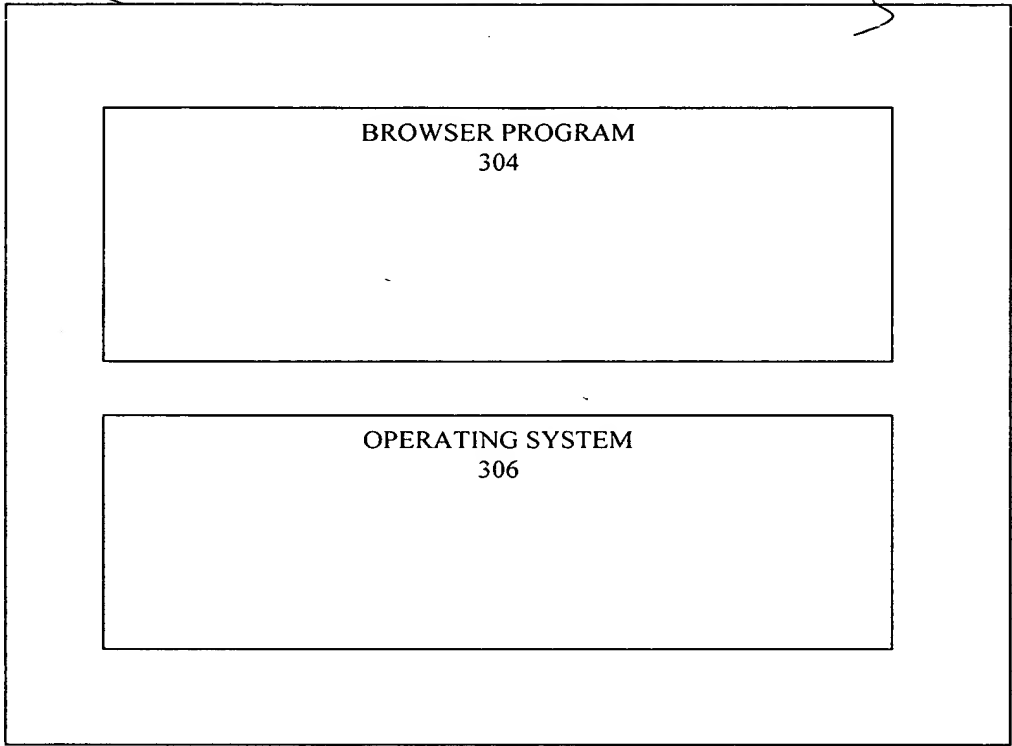

BUS 318



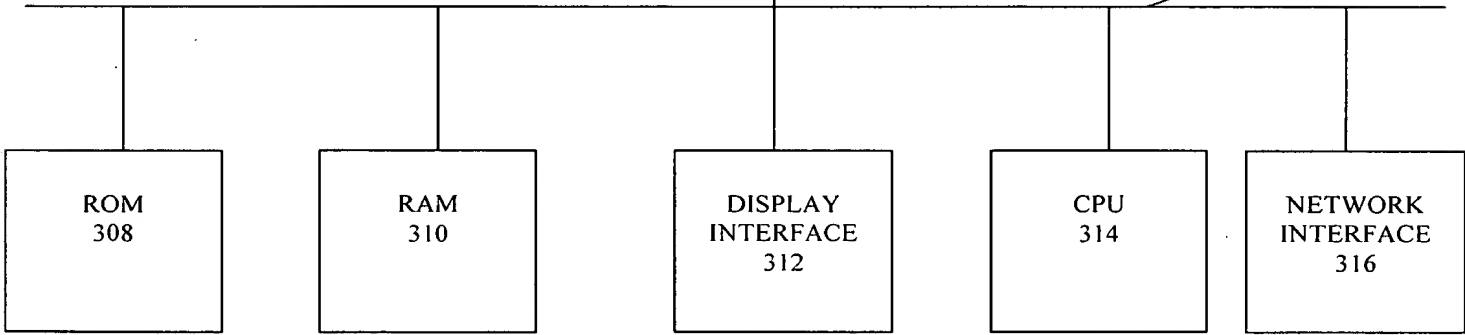


FIG. 4

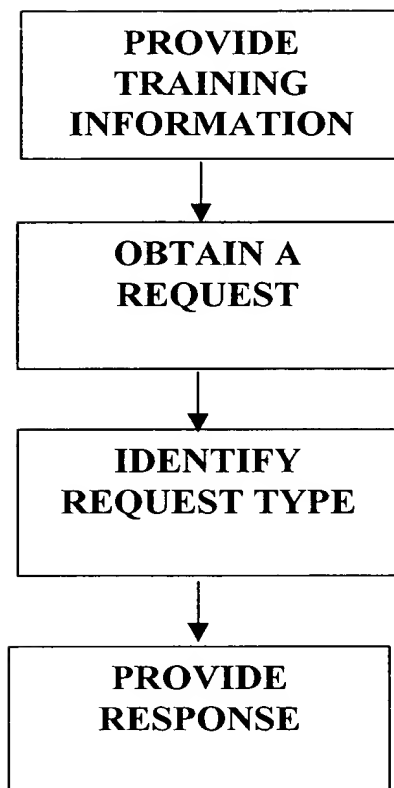

006727 4566260

FIG. 5

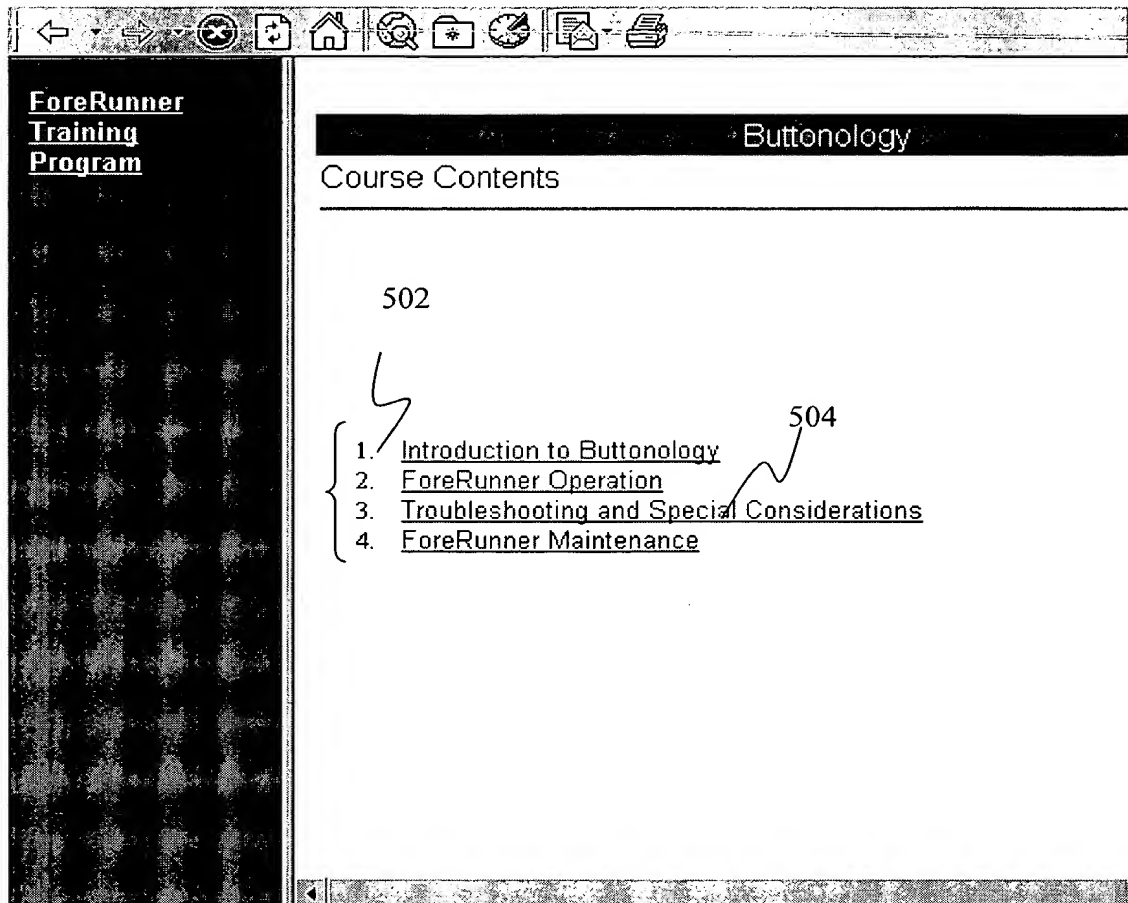

006T2T" 25E6E460

FIG. 6

600


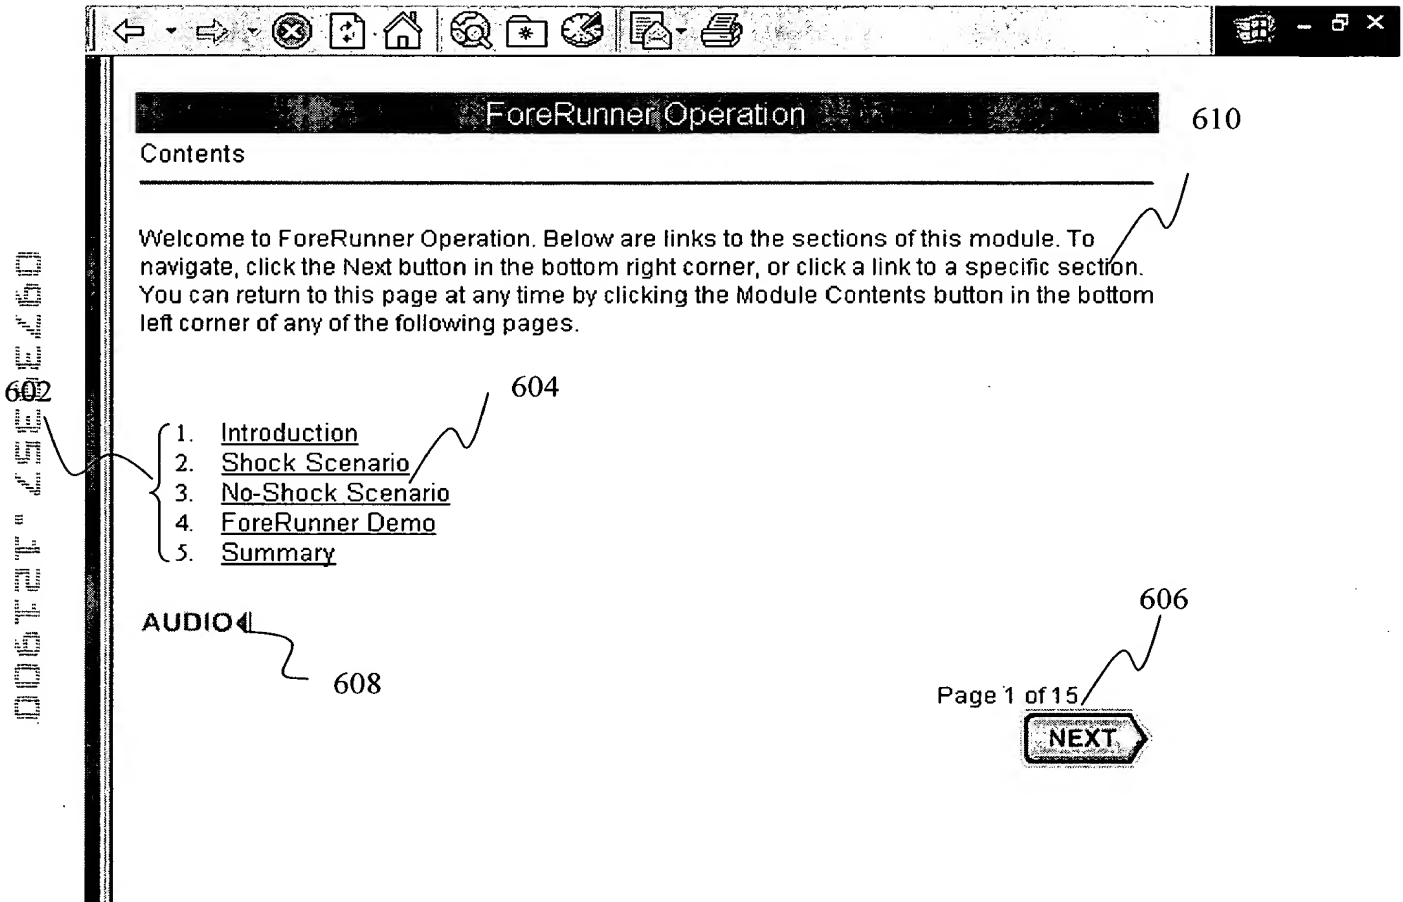


FIG. 7

700

006T2T" 2566E260

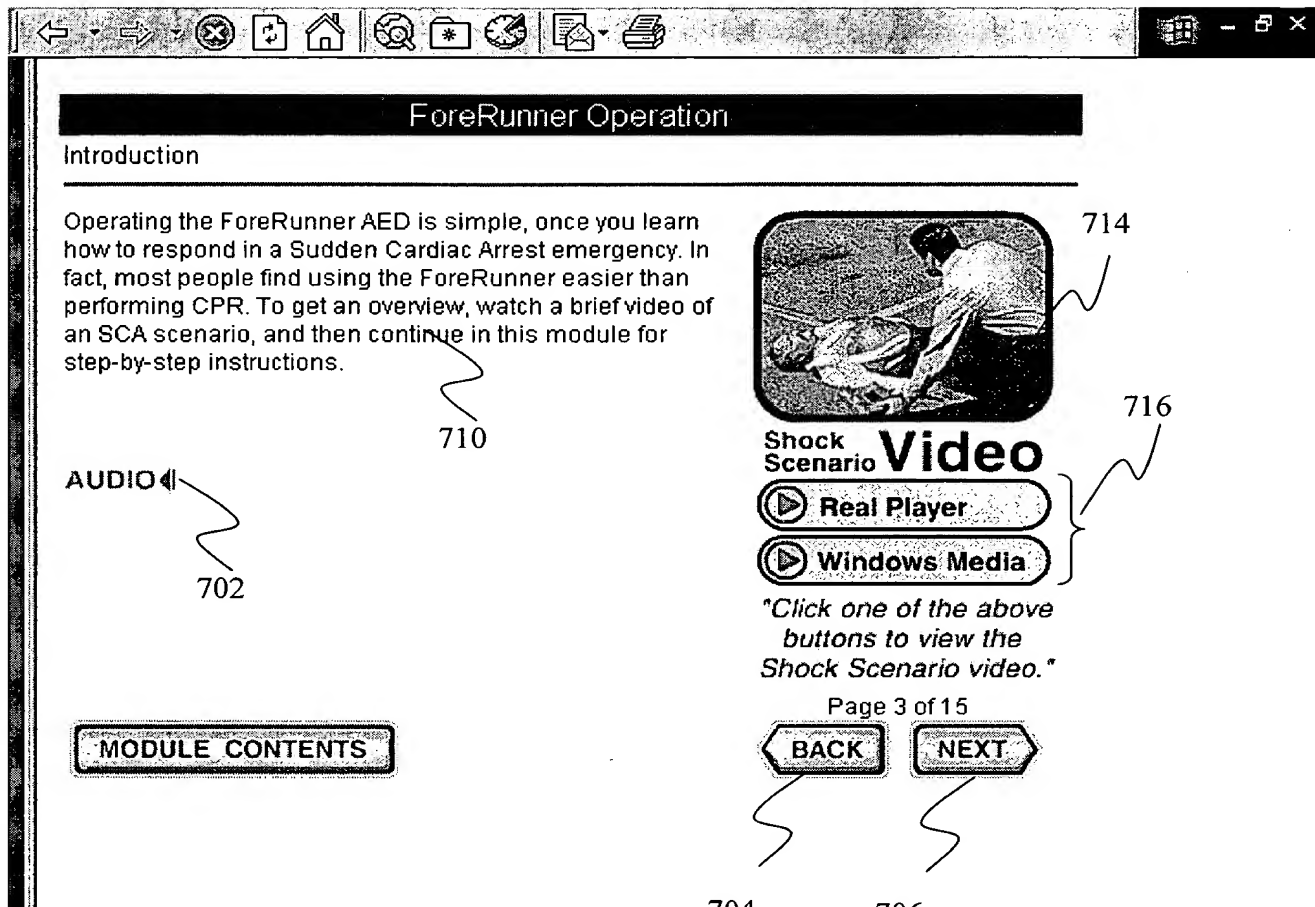

704

706

FIG. 8

800

006T2T 256E260

← → ↻ ⌂ 🔍 📁 ⚙️ 📄 🖨️

⌂ - □ ×

ForeRunner Operation


Shock Scenario

Open the electrode pads package and remove the pads. Following the pad icons, place one pad just below the patient's right collarbone. Place the other pad on the patient's left side, over the ribs below the breast. After assuring that the pads are firmly attached to the patient's chest, plug in the pads connector next to the flashing light on the ForeRunner.

AUDIO 🔊

820

Place Pads

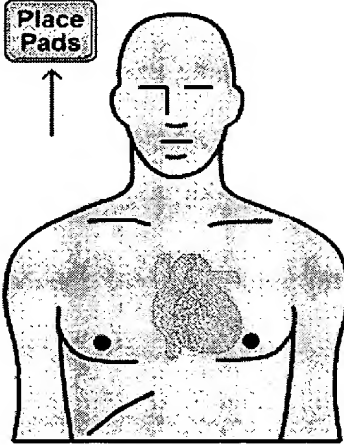

MODULE CONTENTS


Page 8 of 15

BACK

NEXT

FIG. 9

900

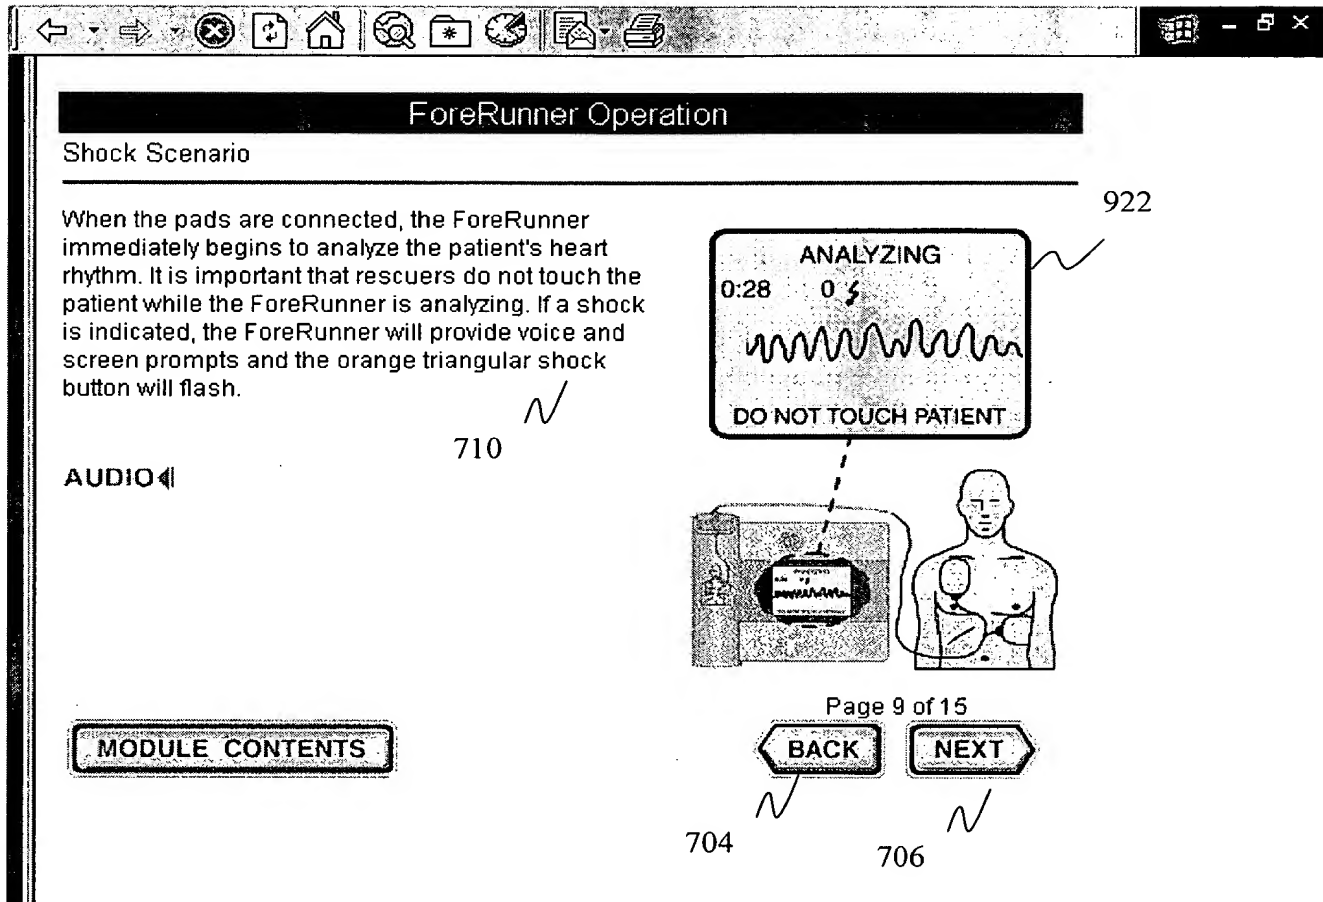

006T2T" / 5E6E / 60

FIG. 10

1000

006T2T " 4566E 60

ForeRunner Operation

Shock Scenario

Before delivering the shock, it is important that the ForeRunner operator visually and verbally clears the patient. The ForeRunner operator should shout, "I'm clear," "you're clear," or simply "clear." Visually check to be certain that no one is touching the patient.

710

1518

After making sure everyone is clear of the patient, press the orange button to deliver the shock.

AUDIO

1024


Page 10 of 15

MODULE CONTENTS

BACK NEXT

FIG. 11

1100

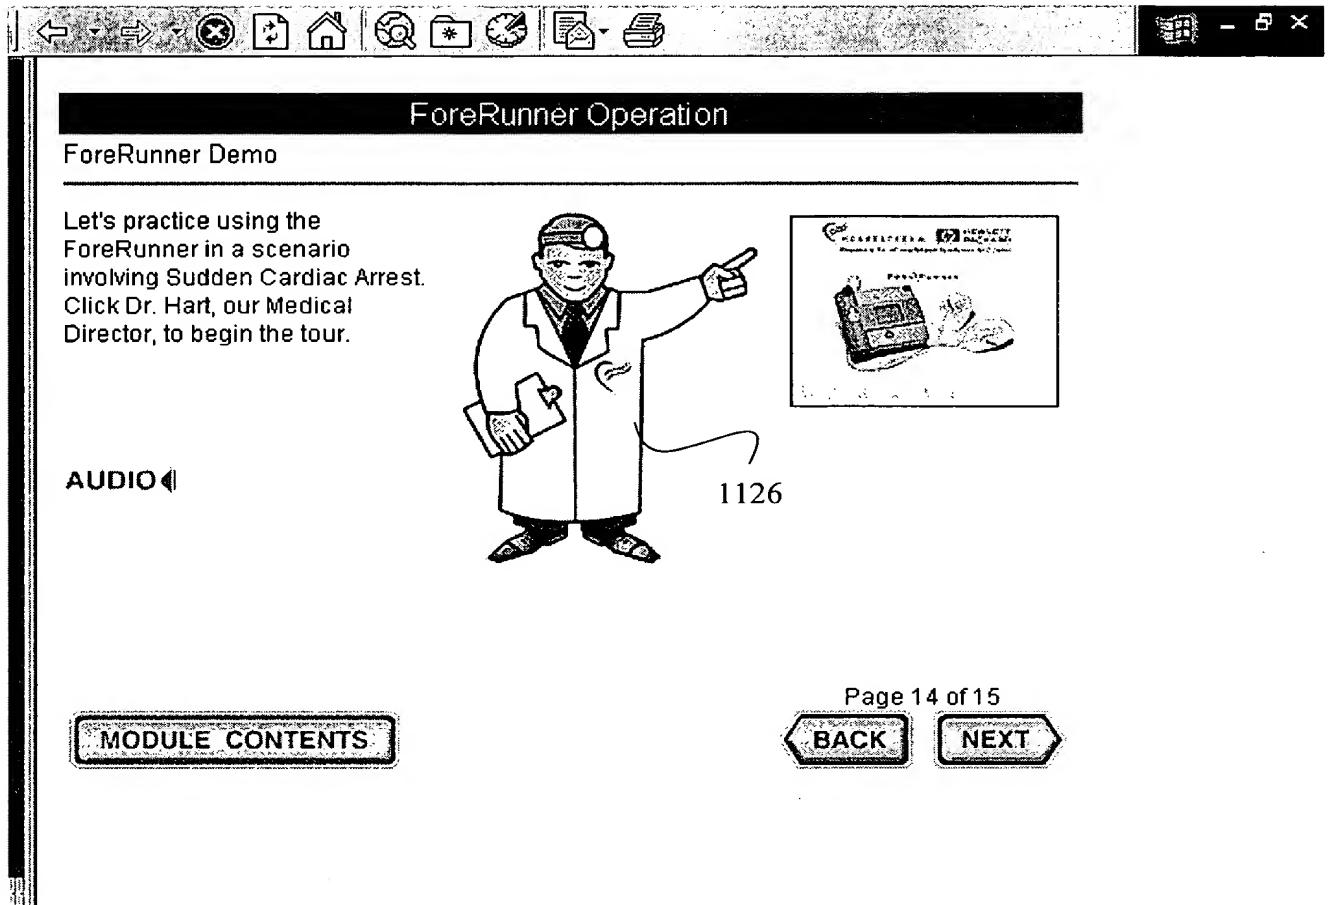

006T2T" / 5E6E/60